Quick install guide X10 AC 115V/230V AC



LOCATION





SETTINGS TABLE










CAUTION!


ISOLATE POWER

Only qualified personnel may install, configure or repair this product.

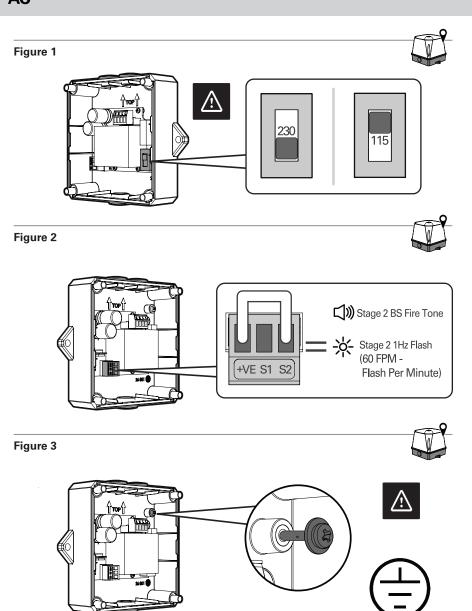

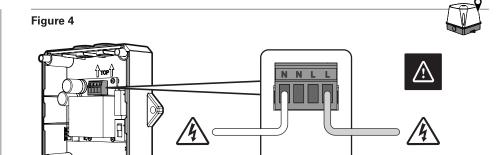

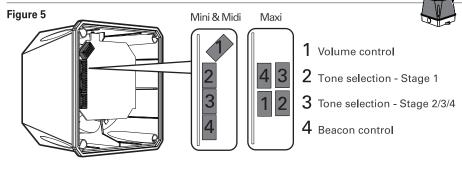

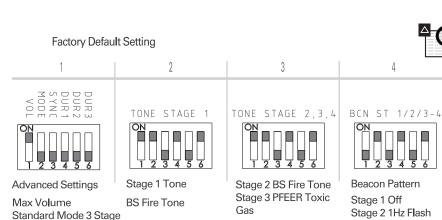

Immediate Start

Time out Disabled



(60 FPM - Flash per Minute)

Stage 3 Off

Quick install guide X10 AC 115V/230V AC











SETTINGS TABLE







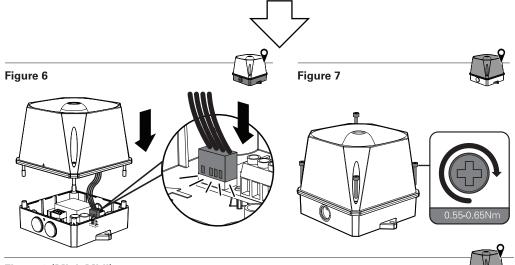

 




 



Figure 9 (Maxi)



ISOLATE POWER

 Only qualified personnel may install, configure or repair this product.

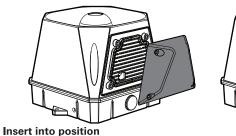



Default settings

SDR TONE	Stage 1 BS Fire Tone
	Stage 2 BS Fire Tone
	Stage 3 PFEER Toxic Gas
BEACON	Stage 1 Off
	Stage 2 1Hz Flash
	(60FPM - Flash Per Minute)
	Stage 3 Off
SPL	Max

Manual:

For more information on how to further adjust and setup the Eaton X10 please refer to the manual:

www.eaton.com/manuals/x10

Contact:

Technical support

Tel: +44(0)1633 628500

Email: FireCustomerService@eaton.com

Eaton Electrical Products

Llantarnam Park, Cwmbran NP44 3AW, United Kingdom © 2019 Eaton All Rights Reserved

Eaton is a registered trademark. All other trademarks are property of their respective owners.



Powering Business Worldwide